




CT2.0 Cybertruck Front Bumper Bar Heavy Duty Grille Guard Push Bar Off-Road Bull Bar Upgrade Package Included:

Package Included:

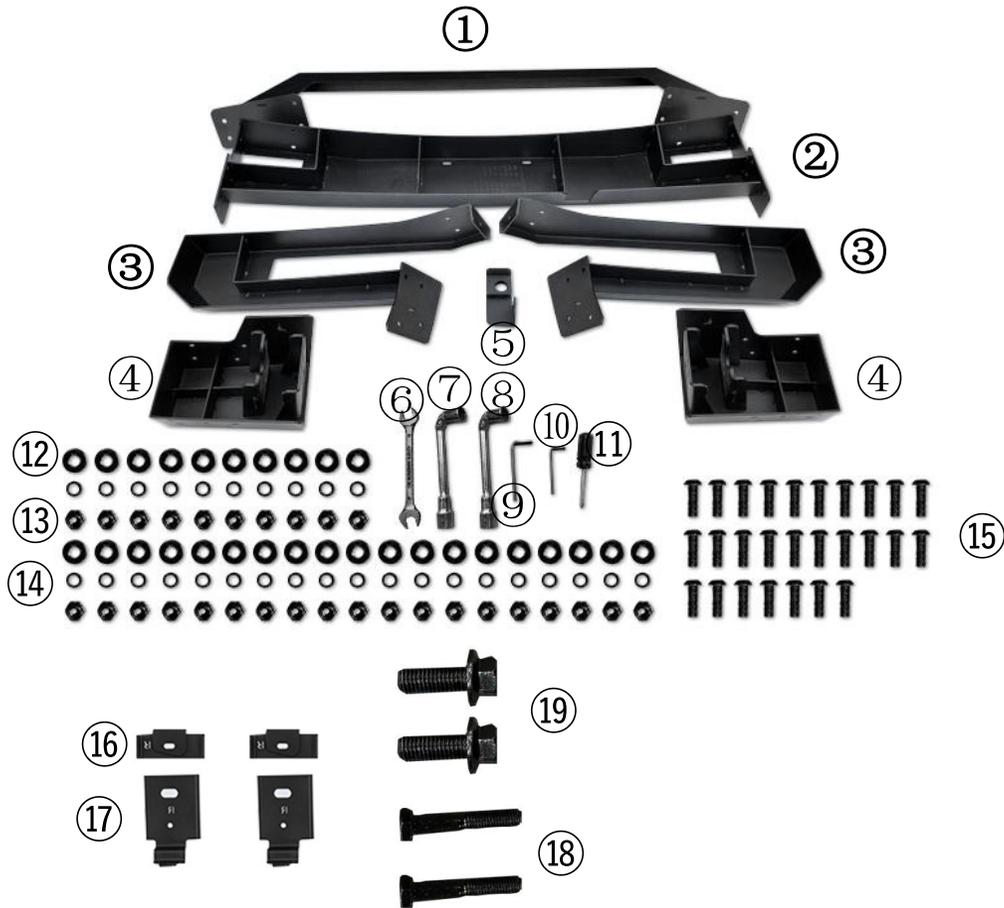

①	Bull Bar*1	②	Front Bumper Main Body*1
③	Front Bumper Left and Right Wings*2	④	Front Bumper Left and Right Connection Frame*2
⑤	Front Bumper Camera Bracket*1	⑥	13mm Open-End Wrench*1
⑦	13mm Socket*1	⑧	15mm Socket*1
⑨	2.5mm Hex Screwdriver*1	⑩	5mm Allen Key*1
⑪	Small Phillips Screwdriver*1	⑫	M8 Washer*29
⑬	M8 Nut*29	⑭	M8 Spring Washer*29
⑮	M8*25 Pan Head Screw *27	⑯	Vehicle Mounting Bracket*2
⑰	Vehicle Mounting Bracket Clip*2	⑱	M8×45 External Hex Bolt*2
⑲	M12 External Hex Bolt (M12)*2	⑳	

CT2.0 Cybertruck Front Bumper Bar Heavy Duty Grille Guard Push Bar Off-Road Bull Bar Upgrade Installation Manual

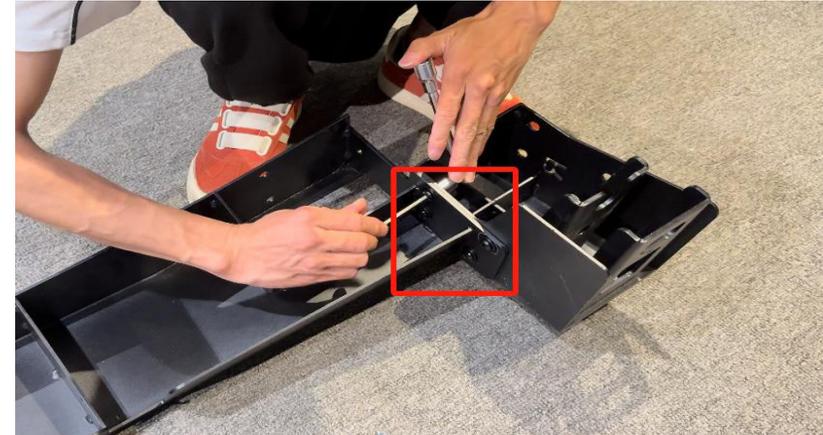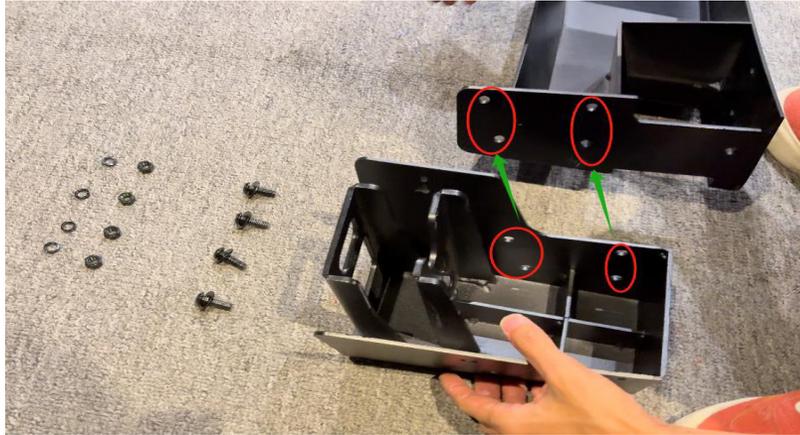

1. Install the left and right connecting body parts onto the main front bumper as shown, then secure with M8*25 cup screws, M8 washers, and M8 nuts. Finally, tighten using a 5mm hex key and a 13mm socket wrench as shown (same operation for both sides).



2. Install the left and right wings onto the left and right connecting body parts of the front bumper as shown, then secure with M8*25 cup screws, M8 washers, and M8 nuts. Finally, tighten using a 5mm hex key and a 13mm socket wrench as shown (same operation for both sides).

CT2.0 Cybertruck Front Bumper Bar Heavy Duty Grille Guard Push Bar Off-Road Bull Bar Upgrade Installation Manual



3. Install the front bumper camera bracket onto the main front bumper, then secure with M8*25 cup screws, M8 washers, and M8 nuts. Finally, tighten using a 5mm hex key and a 13mm socket wrench as shown.



4. Install the bull bar onto the main front bumper, then secure with M8*25 cup screws, M8 washers, and M8 nuts. Finally, tighten using a 5mm hex key and a 13mm socket wrench as shown.

CT2.0 Cybertruck Front Bumper Bar Heavy Duty Grille Guard Push Bar Off-Road Bull Bar Upgrade Installation Manual



5. Remove the original front tow hook trim panel as shown (same operation for both sides).



6. Install the vehicle bracket onto the original tow hook as shown (same operation for both sides).



7. Install the vehicle bracket clip under the original tow hook as shown (same operation for both sides).

CT2.0 Cybertruck Front Bumper Bar Heavy Duty Grille Guard Push Bar Off-Road Bull Bar Upgrade Installation Manual



8. Insert the M8*45 hex bolts from the inner holes of the vehicle bracket upwards into the lower clip holes as shown (same operation for both sides).



9. Tighten the M8 nuts using a 13mm open-end wrench and a 13mm socket wrench as shown (same operation for both sides).

CT2.0 Cybertruck Front Bumper Bar Heavy Duty Grille Guard Push Bar Off-Road Bull Bar Upgrade Installation Manual



10. Install the front bumper onto the vehicle, aligning the screw holes of the left and right connecting body parts with the outer holes on the vehicle bracket as shown.



11. Insert the M12*30 hex bolts from below the vehicle bracket upwards and tighten with a 15mm socket wrench as shown (same operation for both sides).

CT2.0 Cybertruck Front Bumper Bar Heavy Duty Grille Guard Push Bar Off-Road Bull Bar Upgrade Installation Manual



12. Installation complete.